




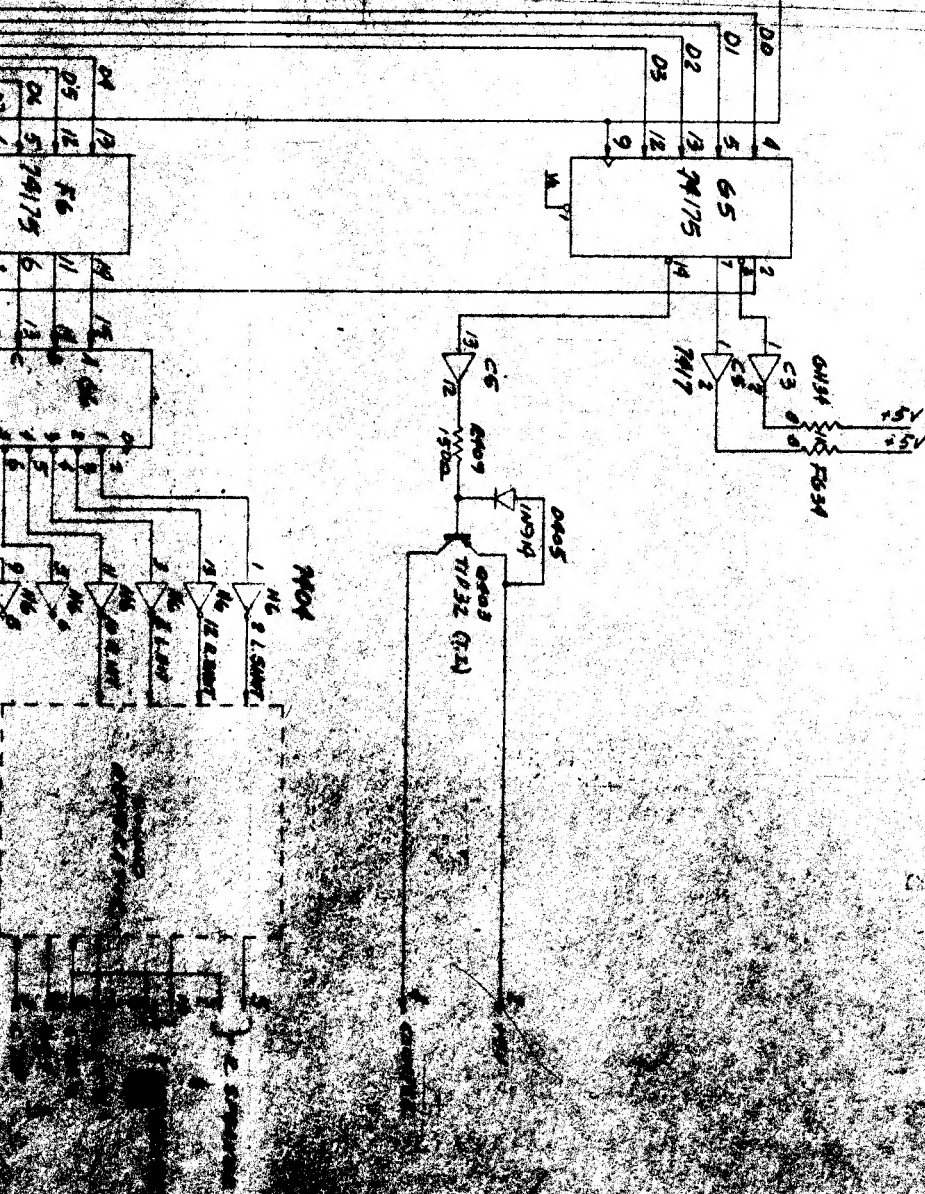


697-4000

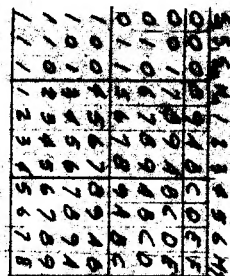



TO CONTROL BOARD

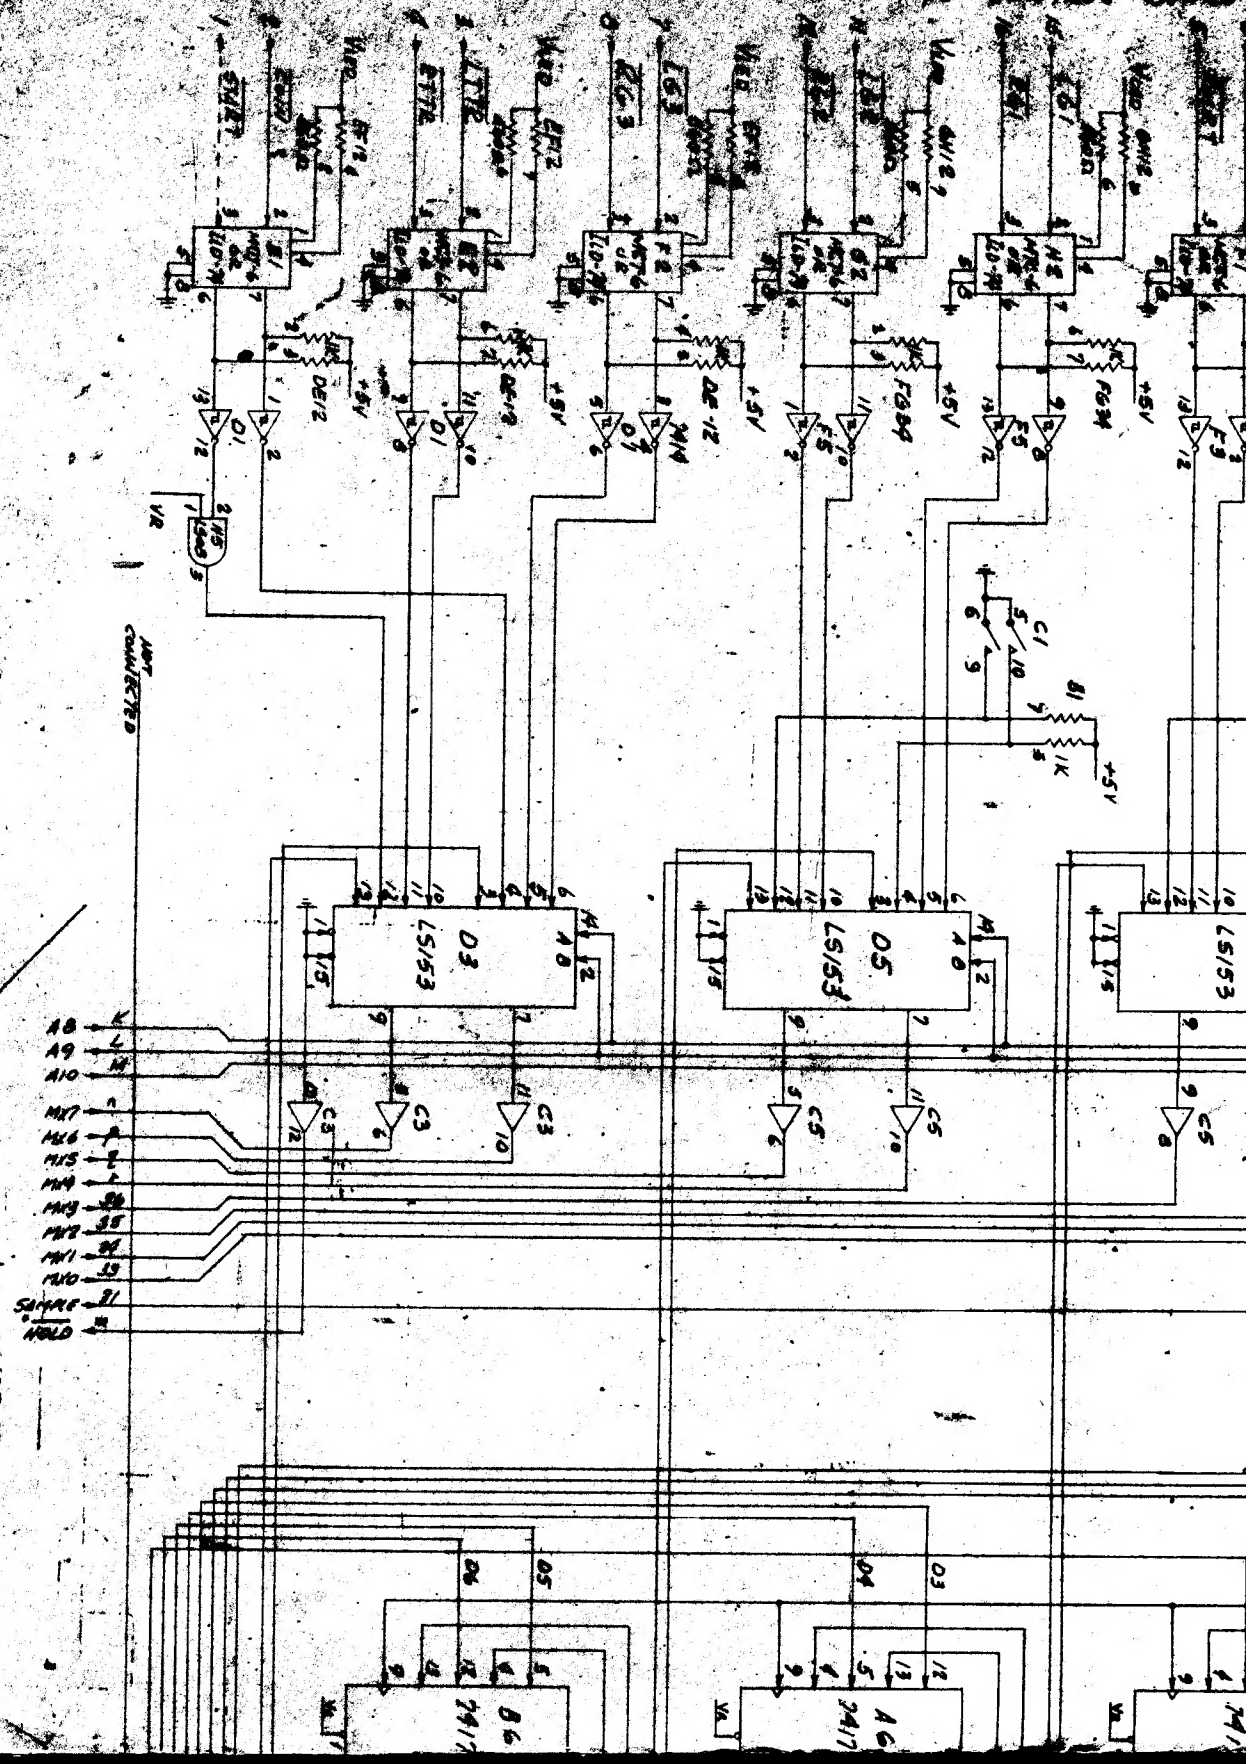

TO CONTROL BOARD CONNECTOR 18 PIN

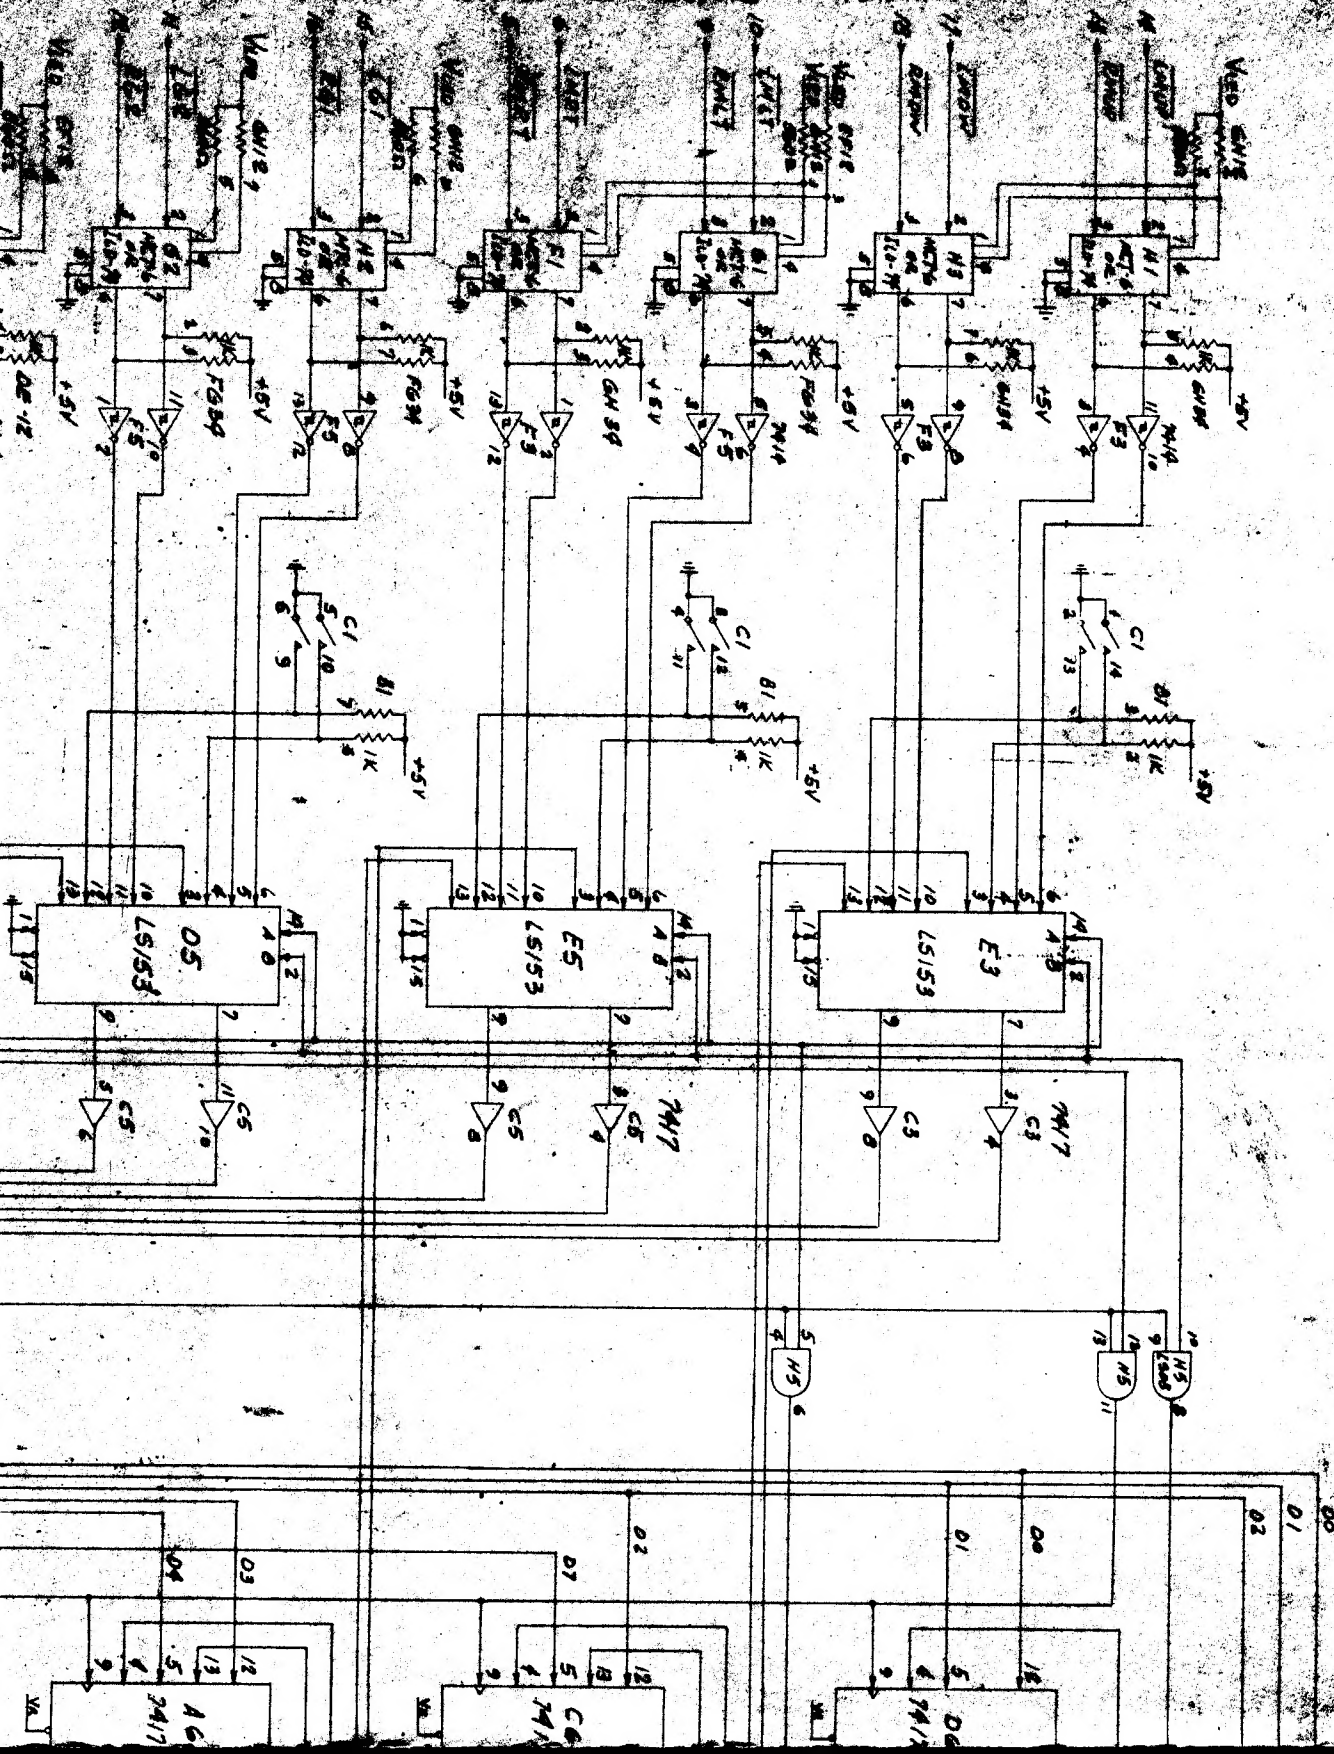


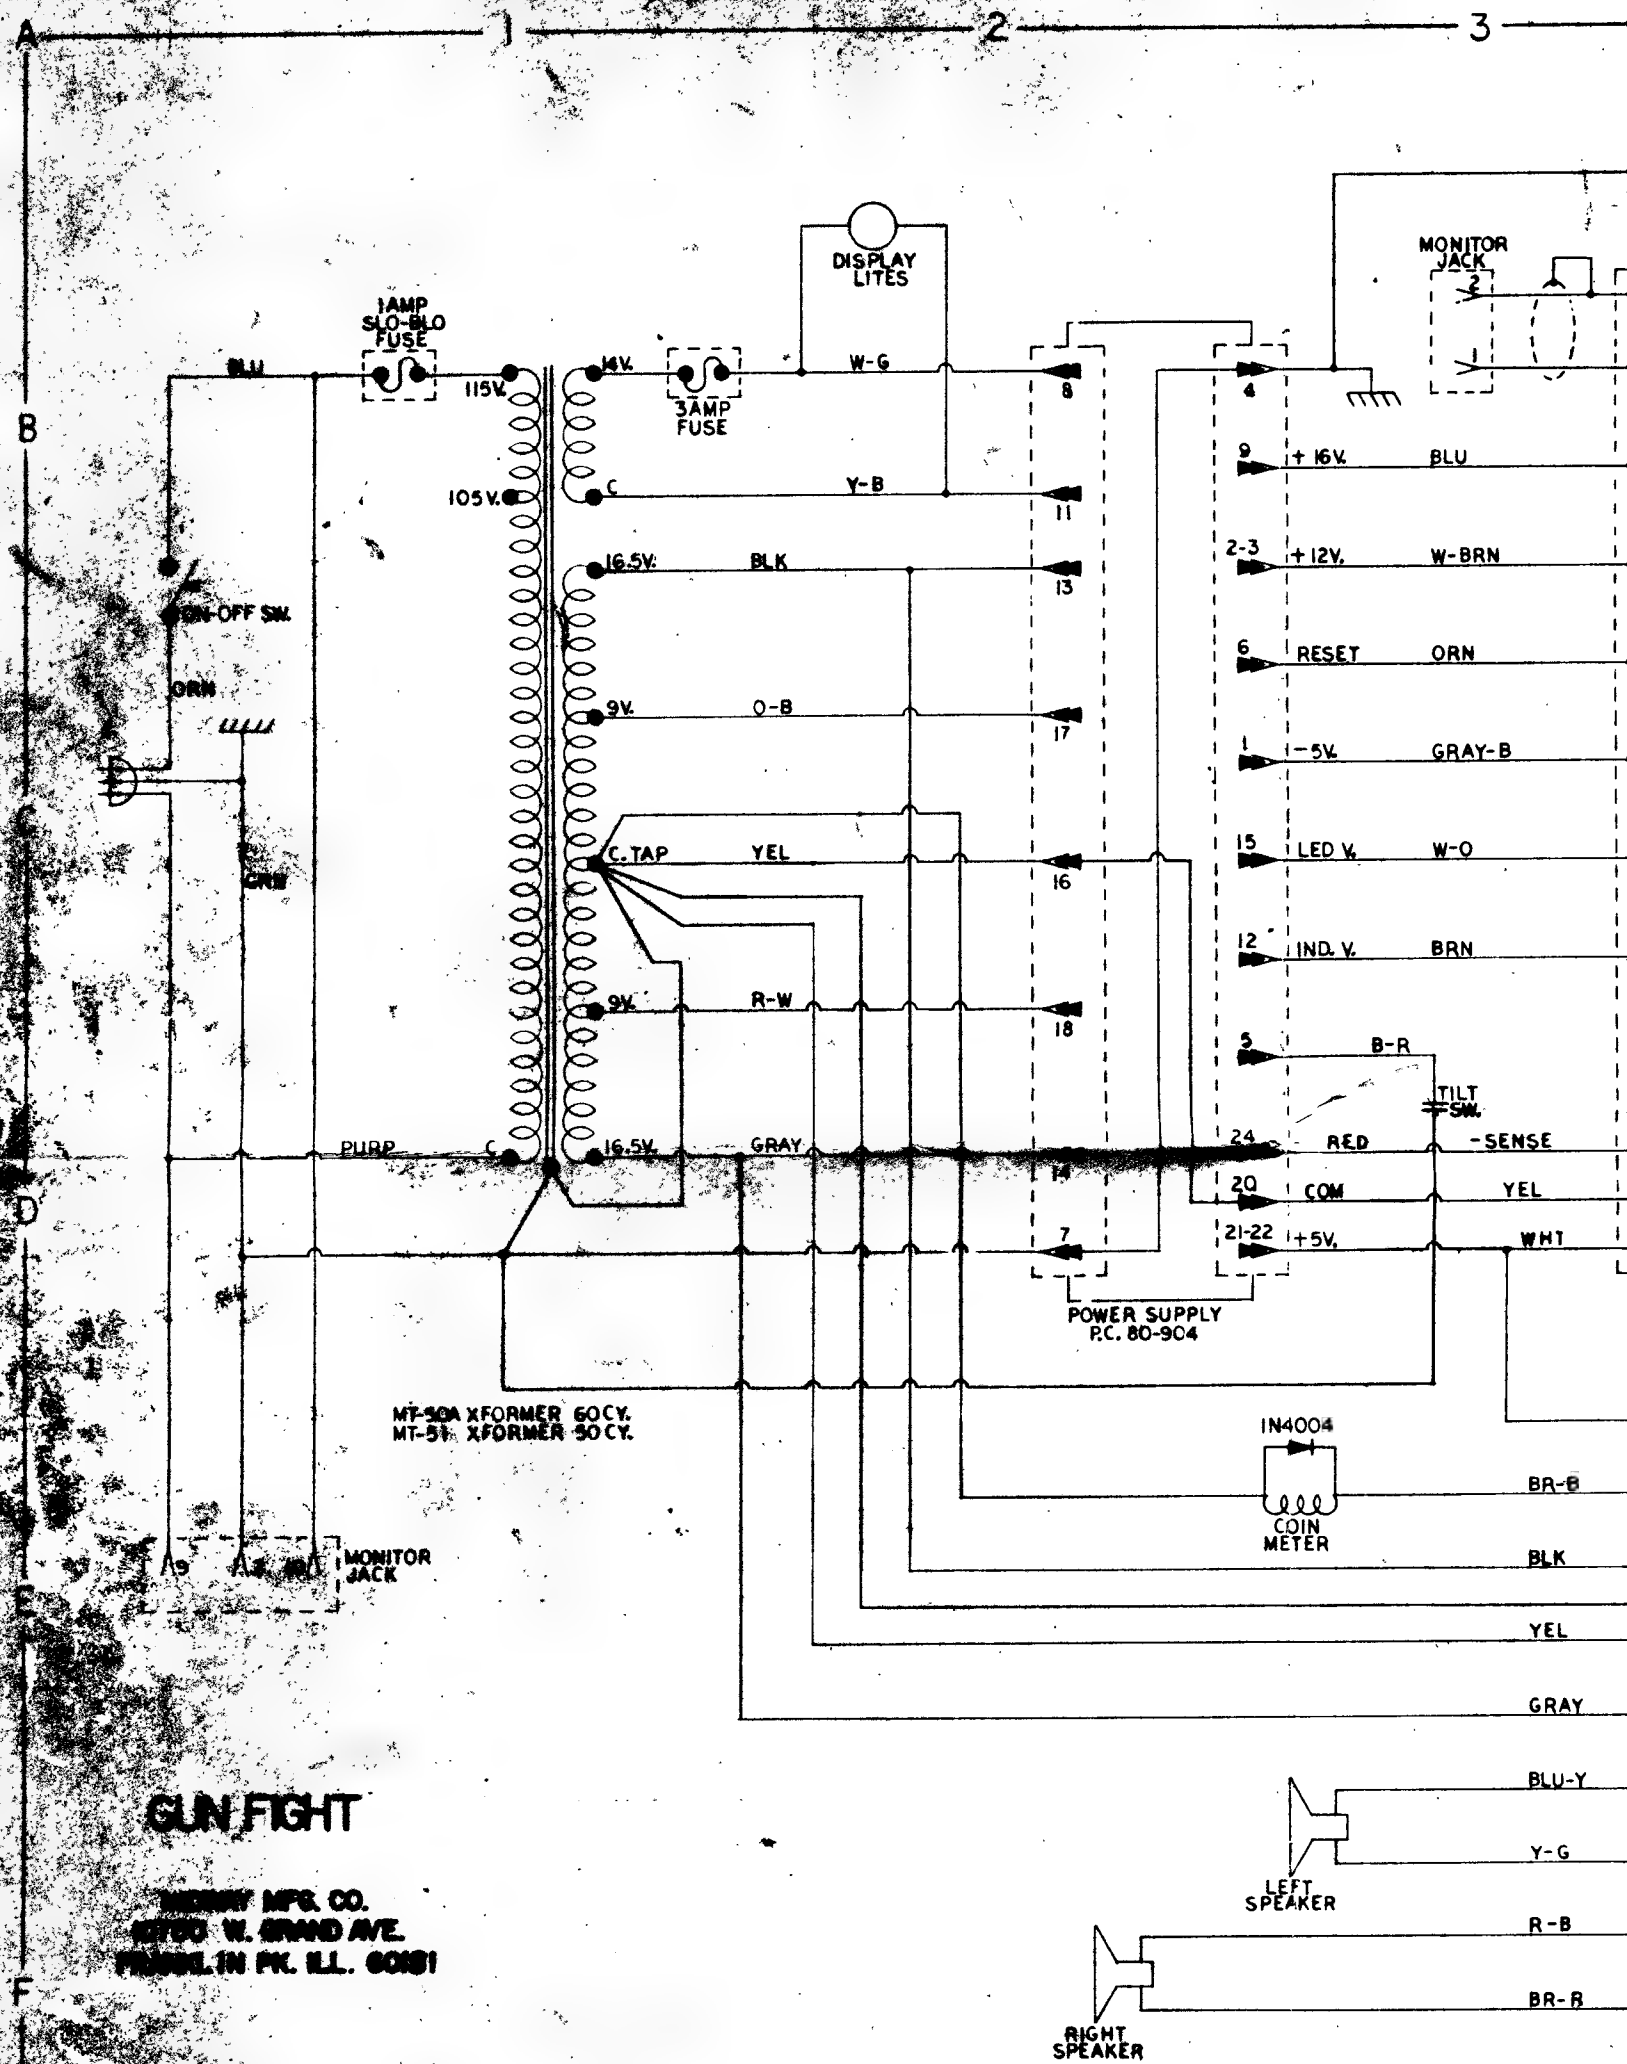

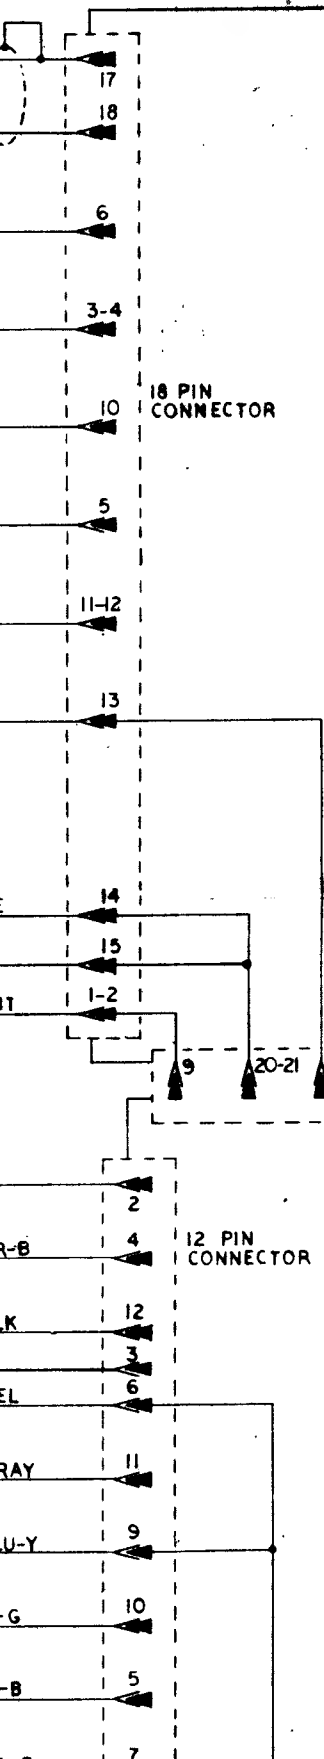


WIRE COLOR CODE		SWITCH SYMBOLS
B-BLACK	O-ORANGE	+ "NORMALLY OPEN" CLOSED WHEN ENERGIZED.
BLU-BLUE	R-RED	
BR-BROWN	W-WHITE	+ "NORMALLY CLOSED" OPEN WHEN ENERGIZED.
G-GREEN	Y-YELLOW	
EXAMPLE: G-R INDICATES GREEN WIRE WITH RED TRACER		+ MAKE & BREAK
ABBREVIATIONS USED		+ MOTOR CAM SWITCH
J-JUMPER	SW-SWITCH	+ CAPACITOR
RE-RELAY	POS-POSITION	
SU-STEP UP UNIT		
OSC-OSCILLATING		

 
PC.80-900 LOGIC MOTHER BOARD




PC.597-907 GAME LOGIC & SOUND BOARD

*NOTE: PLAY SWS. INDICATE
DIRECTION OF CHARACTER

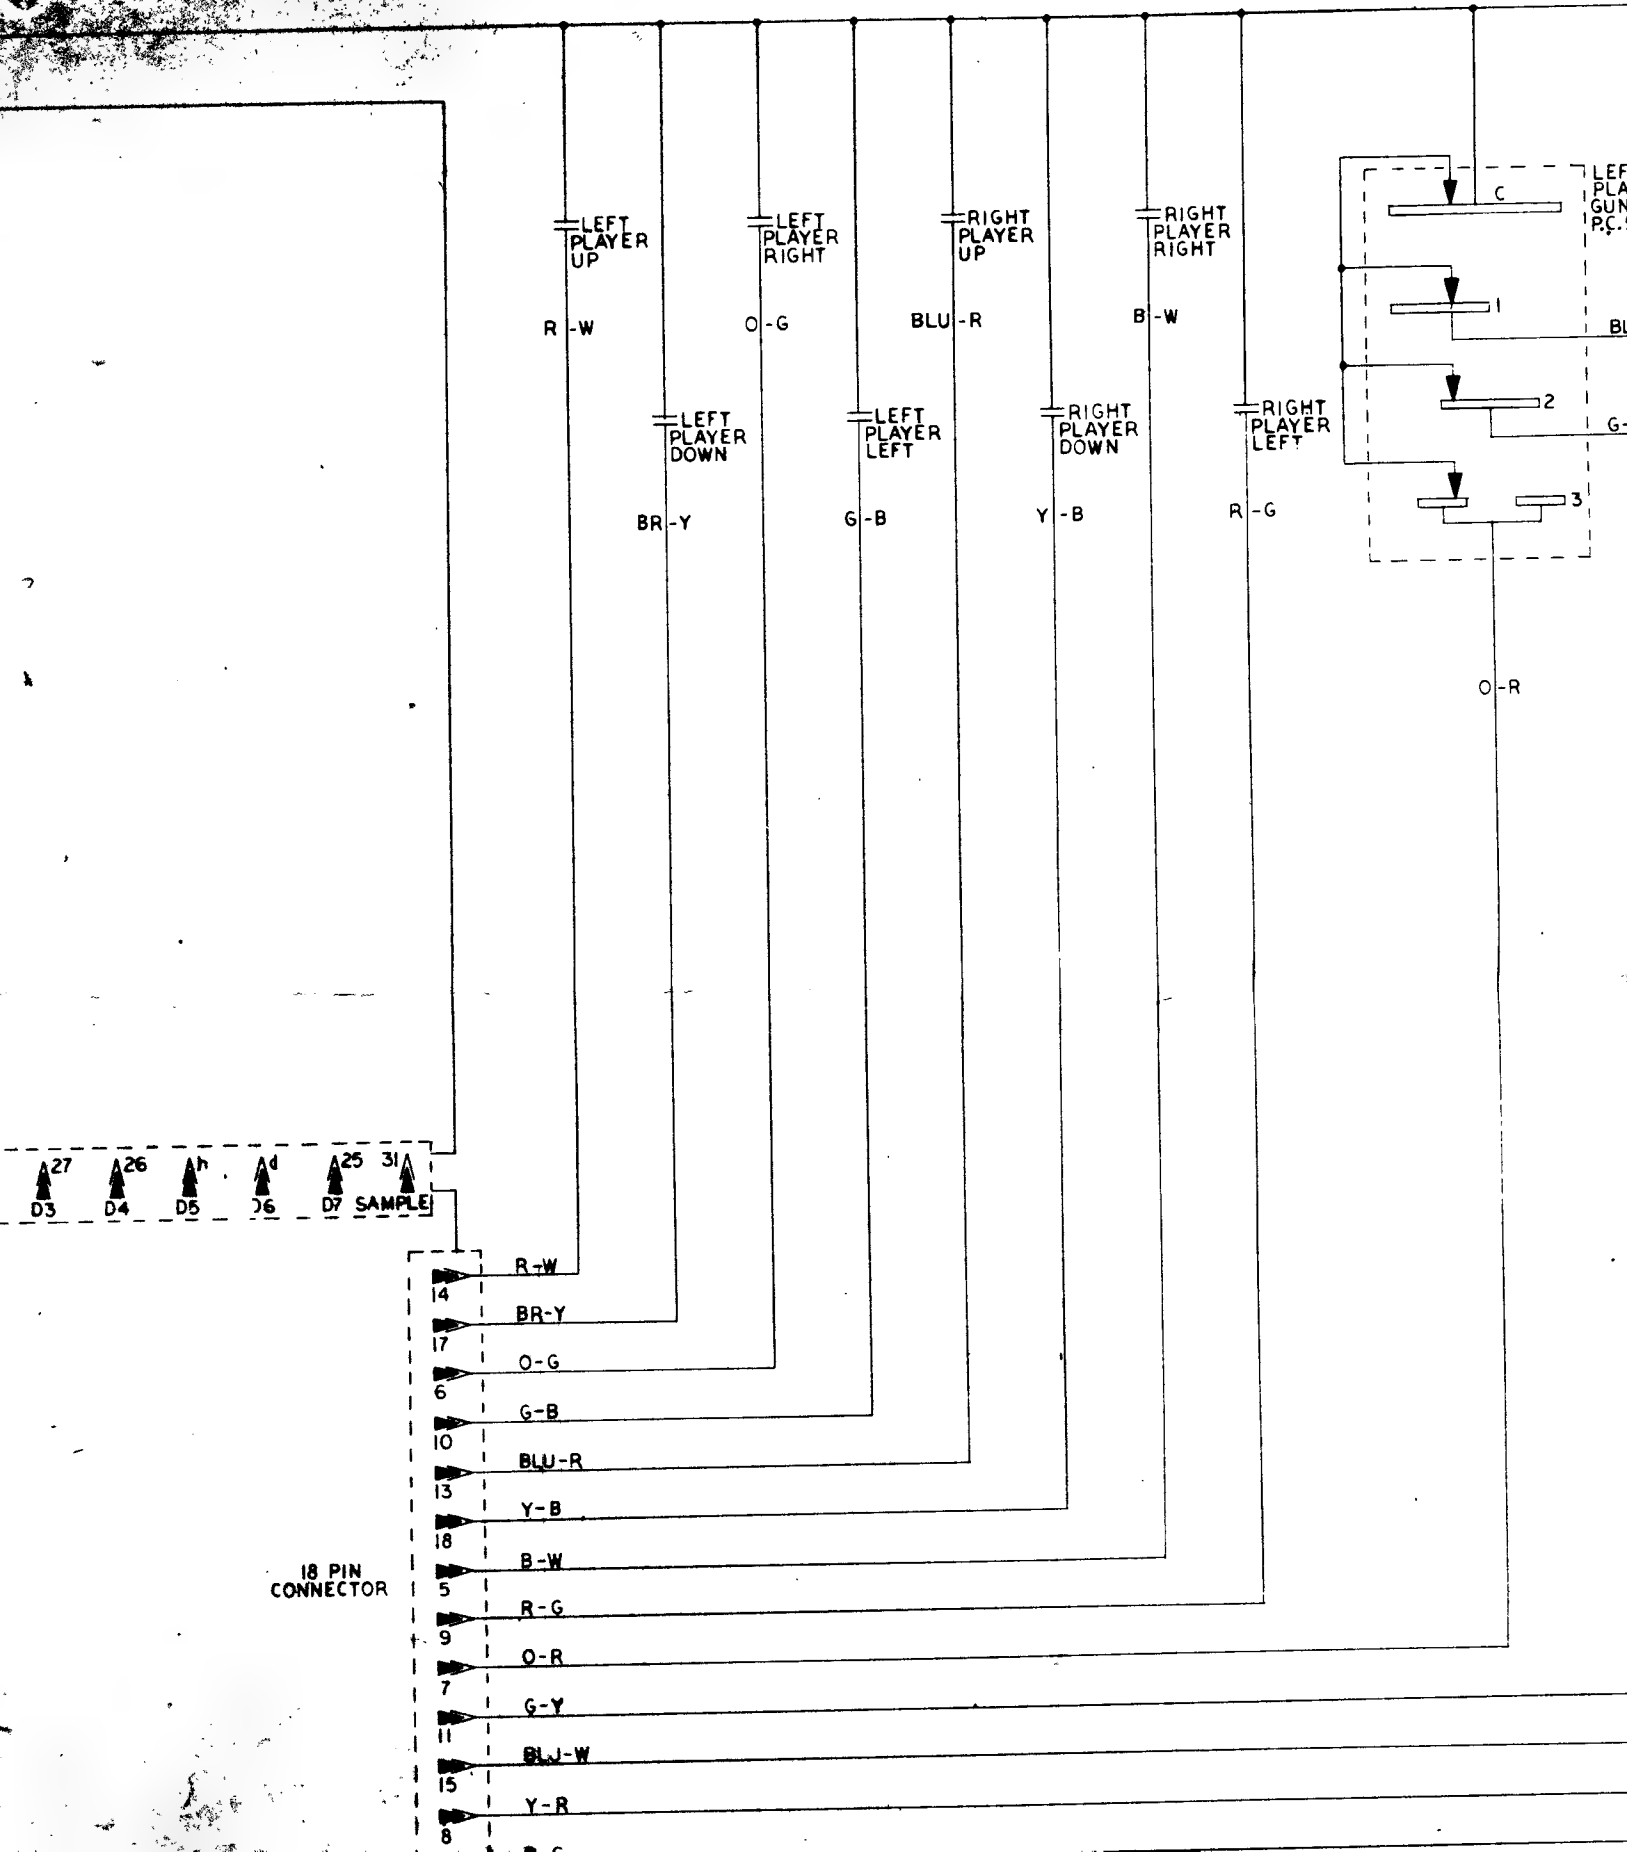

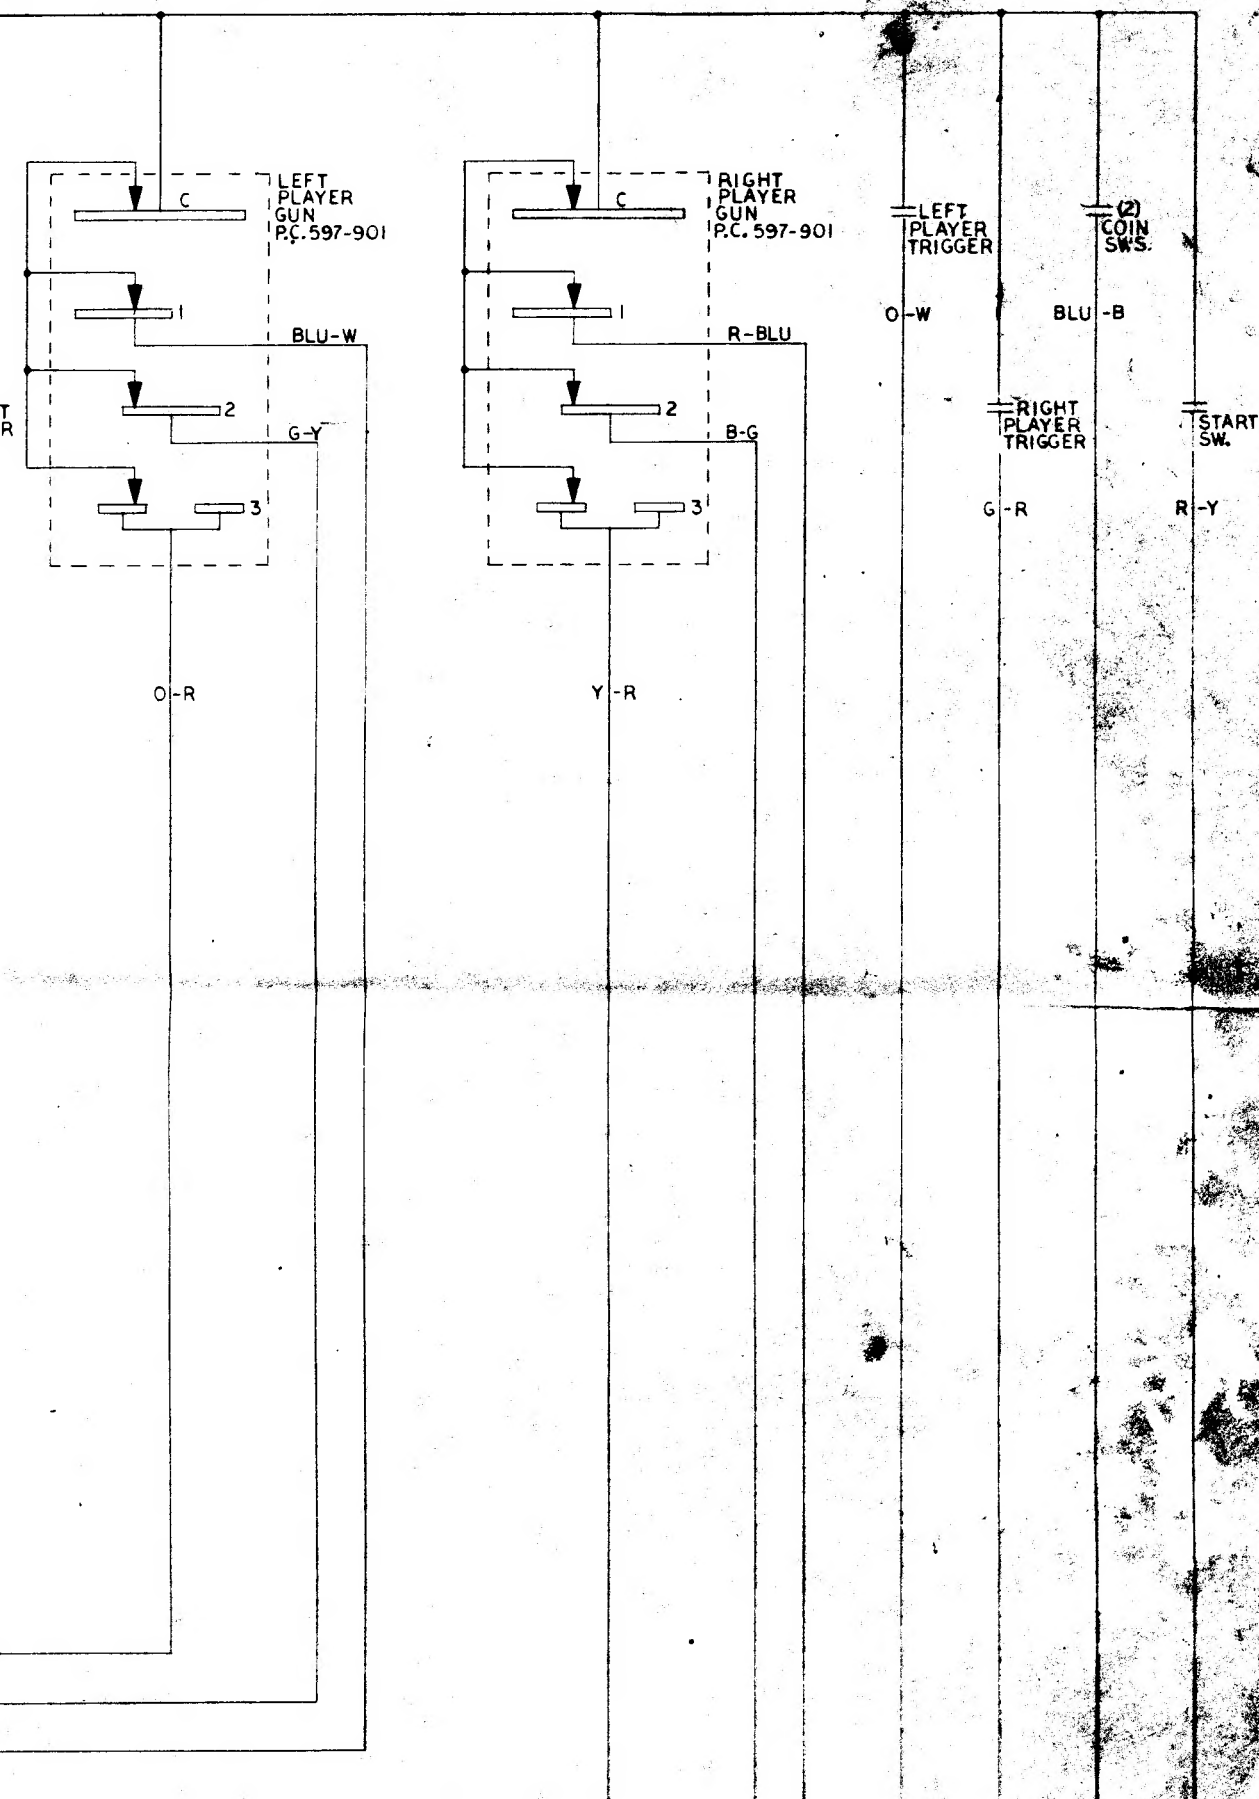

P.C. 597-907 GAME LOGIC & SOUND

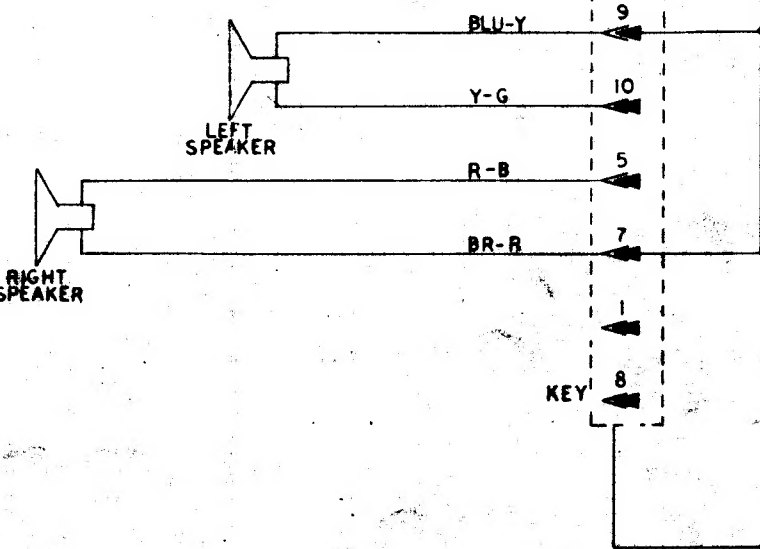

BOARD

CONNECTOR

5	R-G
9	O-R
7	G-Y
11	BLU-W
15	Y-R
8	B-G
12	R-BLU
16	O-W
3	G-R
1	BLU-B
4	B-W

